Cleaning Instructions

sistema

TWIST 'N' SIP™ Coffee



1. Twist lid until the two marker lines meet. Carefully pull apart lid cover from lid base. Unscrew the lid base and remove from cup.



2. Pull the coloured insert away from outer cup and remove.



3. Remove silicone mouth piece.



4.1 Wash the cups, lid cover and lid base in the dishwasher (top rack only). NB; Silicone mouth piece must be washed by hand in warm soapy water or...

5.0



4.2 Hand wash all the components of the cup and lid with warm soapy water.



5. Ensure all components of cup and lid are completely dry before reassembling. Ensure marker lines meet when reassembling lid and twist to secure. Enjoy!

